

MANUAL DE INSTRUÇÕES


USER'S MANUAL

JS20



ONE

ON TIME STYLE

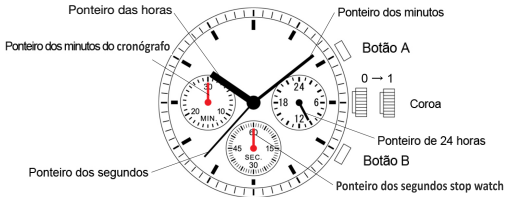

Como acertar a hora

- (1) Puxe a coroa para a posição do 2º clique quando o ponteiro dos segundos estiver na posição das 12 horas
 - Quando o cronógrafo está a medir, se a coroa for puxada para a posição do 2º clique, ela redefinirá automaticamente os ponteiros do cronógrafo para a posição "0".
- (2) Gire a coroa para ajustar os ponteiros das horas e minutos


Tome a.m./p.m. em consideração ao ajustar os ponteiros das horas e minutos para o tempo desejado.

 - O ponteiro de 24 horas move-se correspondentemente com o ponteiro das horas.
 - Ao definir o ponteiro das horas, verifique se o ponteiro de 24 horas está definido corretamente.
 - Ao ajustar o ponteiro dos minutos, avance-o 4 a 5 minutos antes do tempo desejado e, em seguida, retorne à hora exata.
- (3) Empurre a coroa de volta à posição normal.

Como usar a função de cronógrafo

- O cronógrafo pode medir até 29'59" em incrementos de um segundo.
- Quando a medição atinge 30 minutos, o cronógrafo para automaticamente a contagem.

Medição padrão




Medição acumulada do tempo decorrido



Medição de split time



Medição 2 concorrentes



- O ponteiro dos segundos do cronógrafo é capaz de cronometrar 30 minutos. (60 segundos x 30 vezes)
- O ponteiro dos minutos do cronógrafo é capaz de cronometrar 30 minutos.
- Antes de usar o cronógrafo, verifique se a coroa está na posição normal e se os ponteiros do cronógrafo estão redefinidos para a posição "0".
 - Se o ponteiro do cronógrafo não retornar à posição "0" quando o cronógrafo for redefinido para "0", siga o procedimento em "Ajuste da posição do ponteiro do cronógrafo".

Ajuste do ponteiro do cronógrafo

Se os ponteiros do cronógrafo não estiverem na posição "0", siga os procedimentos abaixo para os definir.

- (1) Puxe a coroa para a segunda posição de clique.
 - Quando o cronógrafo está a medir, se a coroa for puxada para a posição do segundo clique, ela será redefinida automaticamente.
- (2) Pressione o botão A ou B para colocar os ponteiros do cronógrafo na posição "0".
 Os movimentos do ponteiro dos minutos do cronógrafo e do ponteiro dos segundos do cronógrafo são intertravados. Para ajustar o ponteiro dos minutos do cronógrafo para a posição "0", continue a mover o ponteiro dos segundos do cronógrafo até que o ponteiro dos minutos do cronógrafo atinja a posição "0".
 - O ponteiro do cronógrafo mover-se-á rapidamente se o botão A ou B for mantido pressionado.
- (3) Empurre a coroa de volta à posição normal.

Função de aviso de esgotamento de energia


Quando a bateria se aproxima do fim, o ponteiro dos segundos **move-se** em intervalos de dois segundos, em vez dos intervalos normais de um segundo. Nesse caso, substitua a bateria por uma nova o mais rápido possível

- O relógio permanece preciso enquanto o ponteiro dos segundos se move em intervalos de dois segundos
- Quando o ponteiro dos segundos se move em intervalos de dois segundos, o cronógrafo não funciona. Se o ponteiro dos segundos se começar a mover em intervalos de 2 segundos enquanto o cronógrafo está medindo, a medição do cronógrafo é redefinida e os ponteiros do cronógrafo retornam à posição "0"

onewatchcompany.com



ON TIME STYLE

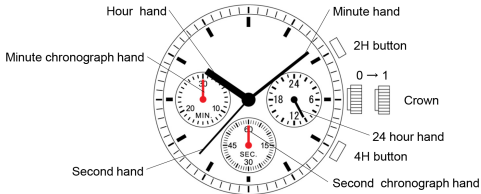


How to set time

- (1) Pull the crown out to the 2nd click position when the second hand is at the 12 o'clock position.
 - When the stopwatch is measuring, if the crown is pulled out to the 2nd click position, it will automatically reset the stopwatch hands to "0" position.
- (2) Turn the crown to set the hour and minute hands.
Take a.m./p.m. into consideration when setting the hour and minute hands to the desired time.
 - The 24 hour hand moves correspondingly with the hour hand.
 - When setting the hour hand, check that the 24 hour hand is correctly set.
 - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- (3) Push the crown back to the normal position.


How to use stopwatch function

- The stopwatch can measure up to 29'59" in one-second increments.
- When the measurement reaches 30 minutes, the stopwatch automatically stops counting.

Standard measurement




Accumulated elapsed time measurement



Split time measurement



Measurement of two competitors



- The stopwatch second hand is capable of timing 30 minutes. (60 seconds x 30 times)
- The stopwatch minute hand is capable of timing 30 minutes.
- Before using the stopwatch, be sure to check that the crown is set at the normal position and that the stopwatch hands are reset to the "0" position.
 - If the stopwatch hands do not return to the "0" position when the stopwatch is reset to "0", follow the procedure in "Stopwatch hand position adjustment".

Stopwatch hand position adjustment

If the stopwatch hands are not in the "0" position, follow the procedures below to set them.

- (1) Pull the crown out to the 2nd click position.
 - When the stopwatch is measuring, if the crown is pulled out to the 2nd click position, it will be automatically reset.
- (2) Press the button A or B to set the stopwatch hands to the "0" position.

The movements of the stopwatch minute hand and the stopwatch second hand are interlocked. To set the stopwatch minute hand to the "0" position, continue to move the stopwatch second hand until the stopwatch minute hand reaches the "0" position.

 - The stopwatch hands move quickly if the button A or B is kept pressed.
- (3) Push the crown back to the normal position.

Power depletion warning function

When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

- The watch remains accurate while the second hand is moving at two-second intervals.
- When the second hand moves at two-second intervals, the stopwatch does not operate. If the second hand starts to move at two-second intervals while the stopwatch is measuring, the stopwatch measurement is reset and the stopwatch hands return to the "0" position.

JS20

onewatchcompany.com

ONE

ON TIME STYLE